

# 5M HD IP

# Fisheye Outdoor Vandal Dome Camera

# **Quick Manual**

G Ver. 1.4 / 2021.03


Before installing and using the camera, please read this manual carefully. Be sure to keep it handy for future reference.



ted and found to comply with the limits for a Class A digital device, pursuant to part 15 of the FCC Rules. imits are designed to provide reasonable protection against narmul interrerence when the equipment is operated in a errical environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in ance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a tital area is likely to cause harmful interference in which case the userwill be required to correct the interference at his own

To disconnect power from the mains, pull out the mains cord plug. When install the product, ensure that the plug is easily

# 1. Product & Accessories

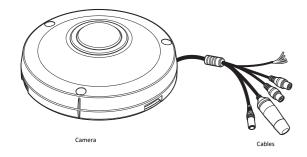











Quick Manua



# Safety Information

uctions are intended to ensure that the user can use the product correctly void danger or property loss.

If the product is not functioning properly or damaged, contact the service center or purchasing office.

**CAUTION:** Risk of explosion if battery is replaced by an incorrect type. Dispose of used of used batteries according to the instructions

ATTENTION: Il y a risque d'explosion si la batterie est remplaée par une batterie de type incorrect. Mettre au rebut les batteries usagees conformément aux instructions



WARNINGS: Serious injury or death may be caused if any of these warnings are neglected.

#### BATTERY


- There is a risk of explosion if the battery is incorrectly replaced. The battery should be replaced only with the same battery.
- Used batteries must be disposed of according to local regulations or battery manufacturer's instructions. Disposing of in a fire or in a hot oven, or mechanically crushing and cutting may cause an explosion
- Leaving the battery in a very high temperature or low air pressure environment may result in an explosion or leak of flammable liquids or gases.

#### **POWER**

- Use only standardized adapters written in the manual. Incorrect connection of the power source can cause fire, electric shock, or failure.
- If there is smoke or a strange smell from the power source, disconnect the power immediately and contact the service center or purchasing office. If you continue to use it as it is, it can cause fire and electric shock.
- Disconnect the power plug from the outlet before connecting to the power terminal block.

- Install it according to the temperature and humidity environment suitable for the product specifications. Otherwise, it can cause fire and electric shock.
- Thunder and lightning can cause problems with the camera. When installing, be careful to minimize damage caused by lightning such as grounding.
- Do not place conductive materials (drivers, coins, metal sticks, etc.) and water-filled containers on the camera. It causes injuries caused by fire, electric shock, and falling.
- If you want to move the installed product, turn off the power and move it or reinstall it. Otherwise, it can cause fire and electric shock.

# 2. Part Name

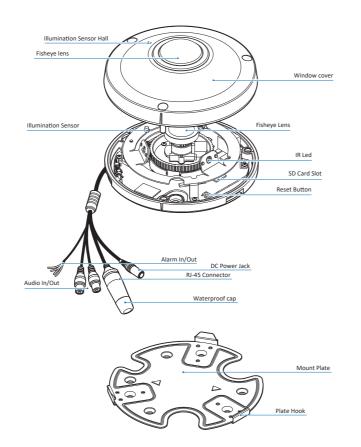

# 5. Do not install it in places where there is a lot of moisture, dust, soot, etc. It causes

Avoid places where direct sunlight comes in or where heat comes out, such as heating appliances. It causes fire and electric shock.

#### CLEANING

Do not spray water directly on each part of the product when cleaning. It causes fire and electric shock.



CAUTIONS: Injury or equipment damage may be caused if any of these cautions are eglected.

- Use the power line after fixing it firmly to the power connection terminal. Incomplete connection can cause a fire.
- Do not extend the adapter output cable. If you need to install the power cable extension, please contact the service center
- Use insulated power for PoE connected external power.

- It is recommended not to touch the lens when installing the product as the factory ships with a focus adjustment completed during the manufacturing completion
- Avoid installing cameras facing bright lights like sunlight. Causes damage to the image sensor
- Make sure it safe and securely when installing camera on the wall or ceilling. This can cause injury by the fall.
- Do not connect multiple cameras to one adapter. Excess capacity causes abnormal heat and fire.
- Wear protective gloves when installing/uninstalling the camera. This causes burns caused by high temperature on the surface of the product.
- Don't drop or shock the product. Please stay away from places where vibration is severe or magnet types are present
- Install it in a well-ventilated place. This can cause fire and failure.


#### CLEANING

Wipe the contaminated surface with a clean, soft, dry cloth or wet the soft, dry cloth to prevent water from flowing, then wipe the contaminated area


# 3. Disassemble the Camera

## Before installing your camera, you have to read the following cautions.

- 1. You have to check whether the location can bear five times of the weight of your camera.
- 2. Don't let the cable to be caught in improper place or the electric line cover to be damaged. Otherwise it may cause a breakdown or fire.
- 3. When installing your camera, don't allow any person to approach the installation site. If you have any valuable things under the place, move them away.

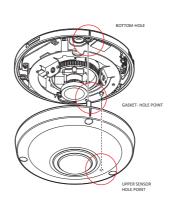

- 1 Detach the dome cover by torx wrench provided from bottom case before installation the camera.
- ™ The camera includes a sensor at the camera's module. For the sensor to function properly the camera's dome includes a special hole
- When assembling the camera together, please make sure the sensor hole in the camera's dome is positioned on top of the sensor on the camera's module
- Be sure to assemble the dome cover and bottom case to match the case outline.

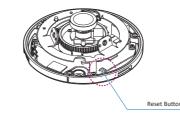

#### Reset to the Factory Default Press the reset button for 5 seconds to

return the setup to the factory default.

## Warning:


If you press the 'Reset' button, you will lose all setting data. If needed, please, make a note for further installation.

# Installation and Use Precautions

- The battery (battery pack or equipped battery) must not be exposed to excessive heat such as sunlight, fire, etc.
- Do not disassemble the camera at your discretion.
- If you forcefully install the product with excessive force, malfunction can damage the camera
- Do not punch or shake the camera and be careful not to damage the camera with careless storage or malfunction.
- Be careful not to install the camera in a rainy or humid place, and do not leave it in a wet place.
- Installing or using the product in water can cause serious product failure.
- Do not install the product if there is chemical or vapor in the place where the product is installed, or if it can be generated.
- Be careful not to get chemicals on the surface of the product when installing the product. Chemical solvents such as cleaning agents and adhesive components can cause fatal damage to the surface of the product.
- Do not install it near the kitchen or cooking table as edible oil such as soybean oil can also cause product damage and deformation. It can cause product damage.
- Be careful not to get foreign substances on the Micro SD card terminal. If there is any foreign substance, wipe it with a soft cloth.
- Data will not be saved at the end of the life of the Micro SD card. In this case, purchase a new Micro SD card.
- Moisture may occur in the glass of the camera when the new product box is opened (or when the product is initially running). The generated moisture is removed by a Gore vent attached to the camera within hours of the power connection.
- For products enclosed with a desiccant or card-type absorbent, please install it according to the manual.
- Use only with cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus.
- Unplug this apparatus when a cart is used. Use caution when moving the cart/apparatus combination to avoid injury from



# 4. Installation

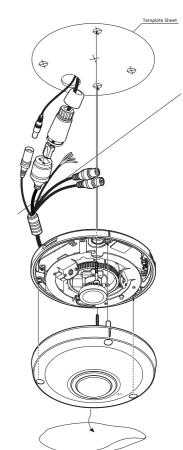


- 1 Detach the camera's cover dome from the camera's module by unscrewing the three cover dome srews using L-wrench.
- 2 Use the camera or mounting template to mark and drill necessary holes in the wall or ceiling.
- 3 Pull wires through and make connec
- Put the Lan cable into (a), then (b) will be assembled to (a) tightly. As a fina step. (c) need to be assembled to (b)



- Using two(2) included screws, mount and secure the camera to the mounting
- 5 Secure the camera's cover dome onto the camera base to complete the installation
- 6 Detech the protection film from the dome cover.




# 5. Installation Using Mount Plate

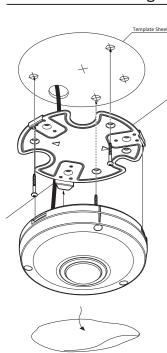


- 1 Detach the camera's cover dome from the camera's module by unscrewing the three cover dome screws.
- 2 Using the metal mount plate, mark and drill the necessary holes in the wall or
- 3 Pull wires through and make connections.
- 4 Using the three (3) included screws. mount and secure the camera to the wall or ceiling.
- 5 Attach the camera base to the metal mount by snapping it into the place using the two metal handles.
- 6 Secure the camera's cover dome onto the camera base to complete the installation.
- 7 Detech the protection film from the dome

# 6. Installation Using Mount Bolt & Nut

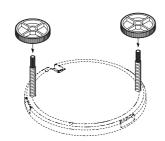

- 1 Using the template sheet, make and drill the cabling holes on the wall/ceiling.
- 2 Secure the two long mounting screws to the camera's base.
- 3 Pass the wires through the mount bracket and make all necessary connections.
- 4 Mount the camera to the mounting surface by using the 2 mounting nuts. Rotate the locking discs over the screws until the camera is held tightly from the mounting surface.

 

- Secure the camera's cover dome onto the camera base to complete the installation
- 6 Detech the protection film from the dome cover.

# 7. Cabling

#### **Two Options**

 
Use a PoE-enabled switch to connect data and power through a single cable and begin viewing and recording images instantly. A non-PoE switch will require an adaptor for power transmission

#### 1. Using a PoE-Enabled Switch

The Camera is PoE-compliant, allowing transmission of power and data via a single Ethernet cable.

PoE eliminates the need for the different cables used to power, record, or control the camera.


Follow the illustration below to connect the camera to a PoE-enabled switch using an Ethernet cable.



### 2. Using a Non-PoE Switch

If a PoE-enabled switch is not used, use a power adaptor for power transmission and non-PoE switch for data transmission.

Follow the illustrations below to connect the camera without a PoE-enabled Switch.

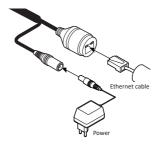

# DI COM · Yellow DO1(N.O.) : Sky Blue 3 Audio In 4 Audio Out DO1 COM : Gray + Dot

1 Power Connection Please, check the voltage and current capacity of rated power carefully.

Rated Power	Power Consumption	PoE
DC 12V	7.5W	IEEE 802.3af Class3

- Network Connection
- 3 Audio In Connect the 'Audio In' cable of the ca

-mera to the device like microphone.

Audio Out supports only RTSP Back channel function. It plans to make it available on the web later.

4 Audio Out

3 Alarm Out It connects to the alarm lights, siren or lamps and the sensor types are normal open and normal close.


Connect the 'Audio Out' cable of the

camera to device like speaker.

- Cable of the alarm output device should connect to DO1(N.O.) and DO1 COM of the cable slot.
- 6 Alarm In

Cable of the sensor/alarm input device should connect to Yellow and White line of the Alam cable.

## 8. IP Installer

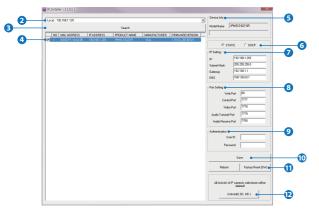

6 Select the network type.

1 The default network type of the camera is

When set to DHCP, if you have a DHCP server.

it will automatically set the Camera IP.

a DHCP server, Camera IP is set to 192.168.xxx.xxx after one minute.

1 When set to DHCP, if you have do not have

- 1. Run IP Installer
- Run the IP installer.
- 2 Click on Network Adaptor selection Menu (NIC) after run this program.
- 3 Select a network which a camera is connected then click on a 'Search' button. (Takes about 5 sec.)
- A Select a camera to set.
- 5 The information of the selected camera will be shown at Device Info.

- Oconvert the device's MAC address to the IP address. ▼ The MAC Address of the device is attached
- on the Product label. MAC address = 00-13-23-01-14-B1
- IP address =192.168.20.177 1 Covert the last two sets of hexadecimal
- numbers to decimal numbers.
- Input IP setting information when the network type is set to STATIC.
- 1 Default TCP/IP information
- Subnet Mask: 255.255.0.0 - Gateway: 192.168.0.1
- DNS: 168.126.63.1
- 8 Change the port as necessary when the network type is set to STATIC.
- 1 A 'Port Forwarding' has to be set for external access to the camera.
- 1 Refer to the manual of the network hub for
- 1 An additional change of HTTPS. RTSP nort can be done at Web Viewer >Admin page.

- Input ID and PW of the camera for authentication.
- Make sure to change the ID and PW for security reason.
- Users Management" for ID and PW change.
- ▼ The ID and PW will be set to default value when 'factory reset' the camera.
- ① Default ID / PW : root / pass
- Make sure to click on 'Save' button to save changed values.
- M An "Apply" message will be popped-up when the settings are applied normally, or an error message will be popped-up when
- 1 To reboot or reset (except network setting) the camera.
- Select a camera (multiple camera can be selected) > Input ID and PW > Click on Reboot or Factory Reset button
- Able to delete an Active-X which is installed when accessing to Web Viewer
- You don't need the function because this camera use the VLC plugin instead of the  $\,$

# Preparing to Mount the Camera

- 1. The mounting surface must bear fice times the weight of your camera.
- Do not let the cables get caught in improper places or the electric line cover to be damaged. This may cause a breakdown or fire.
- CAUTION: These servicing instructions are for use by qualified service personnel only. To reduce the risk of electric shock do not perform any servicing other than that contained in the operating instructions unless you are qualified to do so.
- This product is intended to be supplied by a UL Listed Power Supply Unit marked "Class 2" or "LPS" or "PS2" and rated 12 Vdc, 1A min.
- The wired LAN hub providing power over the Ethernet (PoE) in accordance with IEEE 802.3af shall be a UL Listed device with the output evaluated as a Limited Power Source as defined in UL60950-1 or PS2 as defined in UL62368-1.
- Unit is intended for installation in a Network Environment 0 as defined in IEC TR 62102. As such, associated Ethernet wiring shall be limited to inside the building
- 7. Using the mounting template sheet or the camera itself, mark and drill the necessary holes in the wall or ceiling.

# Disposal of Old Appliance



- The symbol marked in the product, will follow and covered by the Europe Directive 2002/95/EC. All electornic disposal of waste is differenct by the government or
- locally, so so it need to check.
- The correct disposal of your old appliance will help prevent potential negative consequences for the environment and human health.
- For more detailed information about disposal of your old appliance, please contact your city office, waste disposal service or the shop where you purchased the product.